

VOLAMP LTD


FIBRE OPTIC COMMUNICATIONS - DESIGN - DEVELOPMENT - MANUFACTURER

100FU-PCI-E MANUAL

This card is designed to plug into your motherboard, from which it obtains its 5 volt power supply.

You will need to connect the STP socket to the one on your PC via a suitable patch cable. The card is supplied with the STP socket configured as a HUB so a straight through cable to your PC will give a good link

You can alter this configuration by changing the orientation of the jump links as indicated.

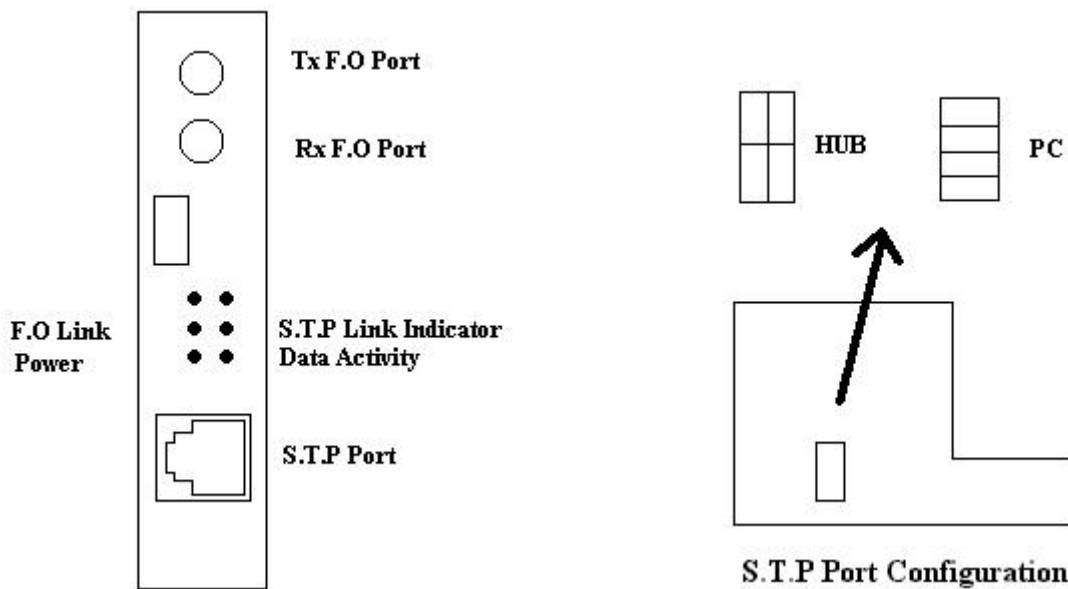

VolAmp Ltd
Unit 3, Riverside Business Park, Dogflud Way, Farnham, Surrey, GU9 7SS
Tel 01252 724055 Fax 01252 733425 E-mail: info@volamp.com
www.volamp.com